

● Drums Setting Table

Note Name	Tone Name
B1 (35)	Bass Drum 1
C2 (36)	Bass Drum 2
C#2 (37)	Rim Shot
D2 (38)	Snare Drum 1
D#2 (39)	Hand Clap
E2 (40)	Snare Drum 2
F2 (41)	Low Tom Tom 1
F#2 (42)	Closed High Hat 1
G2 (43)	Low Tom Tom 2
G#2 (44)	Open High Hat 2
A2 (45)	Middle Tom Tom 1
A#2 (46)	Open High Hat 1
B2 (47)	Middle Tom Tom 2
C3 (48)	High Tom Tom 1
C#3 (49)	Crash Cymbal
D3 (50)	High Tom Tom 2
D#3 (51)	Ride Cymbal
E3 (52)	China Cymbal
F3 (53)	Cup (Mute)
F#3 (54)	Off
G3 (55)	Off
G#3 (56)	Cowbell
A3 (57)	Crash Cymbal
A#3 (58)	Snare Drum 3
B3 (59)	Ride Cymbal
C4 (60)	Off
C#4 (61)	Off
D4 (62)	Off
D#4 (63)	Off
E4 (64)	Off
F4 (65)	Off
F#4 (66)	Off
G4 (67)	Off
G#4 (68)	Off
A4 (69)	Cabasa
A#4 (70)	Off
B4 (71)	Off
C5 (72)	Off
C#5 (73)	Off
D5 (74)	Off
D#5 (75)	Off
E5 (76)	Off
F5 (77)	Off
F#5 (78)	Off
G5 (79)	High Pitch Tom Tom 2
G#5 (80)	Off
A5 (81)	High Pitch Tom Tom 1
A#5 (82)	Off
B5 (83)	Off
C6 (84)	Bass Drum 3
C#6 (85)	Bass Drum 4
D6 (86)	Snare Drum 4
D#6 (87)	Snare Drum 5
E6 (88)	Snare Drum 6
F6 (89)	Low Tom Tom 3
F#6 (90)	Closed High Hat 2
G6 (91)	Middle Tom Tom 3
G#6 (92)	China Cymbal
A6 (93)	High Tom Tom 3
A#6 (94)	Ride Cymbal
B6 (95)	Off
C7 (96)	Off